

Part codes for available HSK CONNECTIONS*


To configure your toolholder you need to choose one of the following connections first.

*See page 69 for the complete list of HSK manufacturing codes.




Modular tool holders

The modular tool holders are used in assembly with sharpening mills and drills with a threaded connection.

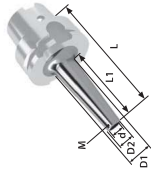

Part code	Description	d	M	L	L1	D1	D2	Connection	Balancing (gPM)
AL00	modular tool holder	8,5	M8	70	50	23	13	HSK 40A-E	24.000
AL01	modular tool holder	8,5	M8	76	50	23	13	HSK 50A-E-F	24.000
AL02	modular tool holder	8,5	M8	126	100	26	13	HSK 63A-E-F	24.000
AL03	modular tool holder	10,5	M10	76	50	23	18	HSK 50A-E-F	24.000
AL04	modular tool holder	10,5	M10	126	100	32	18	HSK 63A-E-F	24.000
AL05	modular tool holder	12,5	M12	76	50	24	21	HSK 63A-E-F	24.000
AL06	modular tool holder	12,5	M12	126	100	31	21	HSK 80A	18.000
AL07	modular tool holder	12,5	M12	194	155	39	21	HSK 100A	18.000
AL08	modular tool holder	17	M16	76	50	34	29	HSK 63A-E-F	24.000
AL09	modular tool holder	17	M16	126	100	36	29	HSK 80A	18.000
AL10	modular tool holder	17	M16	194	155	39	29	HSK 100A	18.000
AL11	modular tool holder	17	M16	194	155	39	29	HSK 125A	18.000

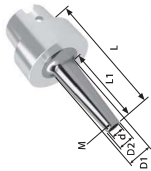

MANUFACTURING MATERIAL

