


Part codes for available HSK CONNECTIONS*

To configure your toolholder you need to choose one of the following connections first.

*See page 69 for the complete list of HSK manufacturing rules.

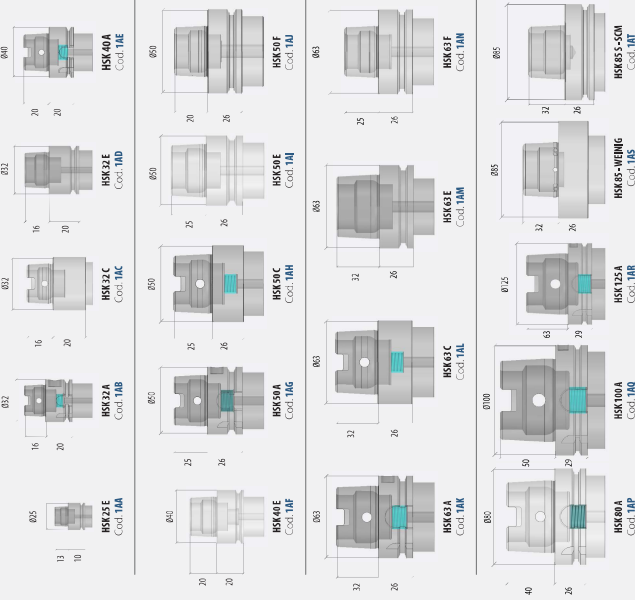

Blank Bars

Tool holders with finished machine connection and untempered bodies, for the manufacturing of mono-block tools.



page 63 P.28.223



Partcode	Description	D	L	Connection	Balancing (RPM)
AV00	blankbar	40	200	HSK40A-E	24.000
AV01	blankbar	50	200	HSK50A-C-E-F	24.000
AV02	blankbar	50	300	HSK50A-C-E-F	24.000
AV03	blankbar	20	200	HSK63A-C-E-F	24.000
AV04	blankbar	25	200	HSK63A-C-E-F	24.000
AV05	blankbar	30	233	HSK63A-C-E-F	24.000
AV06	blankbar	35	233	HSK63A-C-E-F	24.000
AV07	blankbar	1-1/4"	233	HSK63A-C-E-F	24.000
AV08	blankbar	1"	233	HSK63A-C-E-F	24.000
AV09	blankbar	40	233	HSK63A-C-E-F	24.000
AV10	blankbar	30	242	HSK63A-C-E-F	24.000
AV11	blankbar	35	242	HSK63A-C-E-F	24.000
AV12	blankbar	1-1/4"	242	HSK63A-C-E-F	24.000
AV13	blankbar	1"	242	HSK63A-C-E-F	24.000
AV14	blankbar	40	242	HSK63A-C-E-F	24.000
AV15	blankbar	40	200	HSK63A-C-E-F	24.000
AV16	blankbar	50	200	HSK63A-C-E-F	24.000
AV17	blankbar	63	200	HSK63A-C-E-F	24.000
AV18	blankbar	63	300	HSK63A-C-E-F	24.000
AV19	blankbar	80	200	HSK80A	24.000
AV20	blankbar	80	300	HSK80A	24.000
AV21	blankbar	100	200	HSK100A	18.000



Partcode	Description	D	L	Connection	Balancing (RPM)
AV22	blankbar	100	300	HSK100A	18.000
AV23	blankbar	125	200	HSK125A	18.000
AV24	blankbar	125	300	HSK125A	18.000
AV25	blankbar	90	100	HSK85W	24.000
AV26	blankbar	90	150	HSK85W	24.000
AV27	blankbar	90	200	HSK85W	24.000
AV28	blankbar	90	250	HSK85W	24.000
AV29	blankbar	90	300	HSK85W	24.000
AV30	blankbar	40	300	HSK85S	24.000
AV31	blankbar	40	100	HSK85S	24.000
AV32	blankbar	40	150	HSK85S	24.000
AV33	blankbar	50	200	HSK85S	24.000
AV34	blankbar	50	250	HSK85S	24.000
AV35	blankbar	50	300	HSK85S	24.000

MANUFACTURING MATERIAL

